


Self-Install Equipment Instructions

Step 1: Locate the fiber optic cable

Look for a black or yellow fiber optic cable inside your house. It typically comes up through the floor or the wall. Sometimes the fiber is inside its own dedicated fiber wall plate. Yours may look like one of the two pictured here.

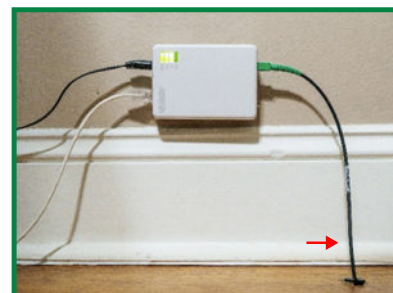



Step 2: Inspect the cable

Carefully examine the end of the fiber cable. Make sure the connector tip is clean and not broken, bent, or dirty. The connector will likely have a green cap—this is the bulkhead connector.



Step 3: Protect the fiber cable

Do not bend the fiber cable more than 90 degrees—sharp bends can break it or weaken the signal. Fiber is made of glass and is fragile—handle with care. Avoid placing anything on the cable or pulling on it.

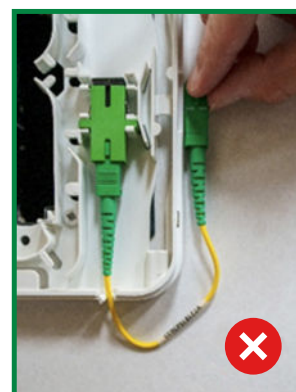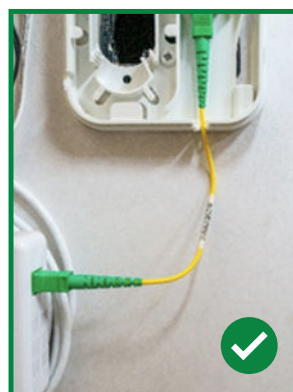

Step 4: Mount the ONT/fiber modem

We recommend mounting the ONT/fiber modem on the wall for stability and cable safety. On the back of the ONT, there are mounting holes spaced 2 inches apart. Use screws to hang the ONT on the wall near the fiber cable and a power outlet.



Your ONT/fiber modem will be either white or black. Both are pictured in the remaining steps.


Step 5: Power up the ONT/fiber modem

Plug the ONT/fiber modem into a power outlet using the provided power adapter. Once it's plugged in, you should see a green power light come on—this confirms it has power. Wait about 2 minutes before plugging in the fiber cable to allow the ONT to initialize.



Step 6: Connect the fiber cable

Align the green fiber connector with the green fiber port on the ONT/fiber modem. There is only one way to insert the connector—gently push it in until you hear a click. This means it's securely connected. After a few moments, you should see a second green light on the ONT labeled “Fiber.”

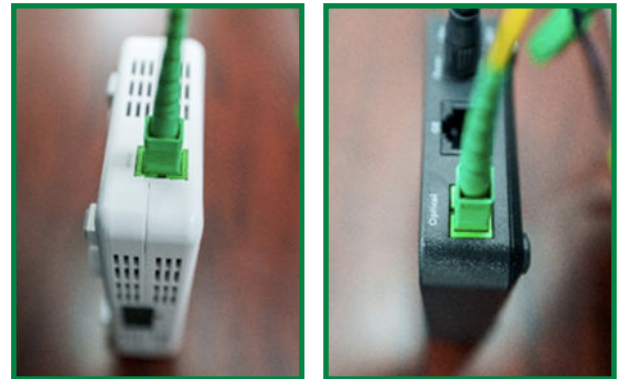

Step 7: Set up the router

Plug the Sprout provided router into a power outlet. Using an Ethernet cable, connect the ONT's Ethernet port to the WAN (Internet) port on the router. After a minute or two, your router should power on and begin establishing an internet connection.

Connect Ethernet to ONT port



Connect ONT/fiber modem to router



Final setup example



Have Questions?

Contact us at **256-737-3200** or **sprout@cullmanec.com**